


## OAKLEY THUMP PRO CONTROLS

TURN THUMP PRO ON	Press and hold the <b>Play / Pause</b> ►   button until the power-up tone is heard.
PAUSE / RESUME PLAYING	Press the <b>Play / Pause</b> ►   button for less than one second.
TURN THUMP PRO OFF	Press and hold the <b>Play / Pause</b> ►   button until the power-down tone is heard. (THUMP PRO will turn itself off after three minutes if left in Pause mode)
INCREASE VOLUME LEVEL	Press the <b>Increase Volume</b> ◀► button
DECREASE VOLUME LEVEL	Press the <b>Decrease Volume</b> ► button
SKIP TO NEXT SONG	Press the <b>Next Song / Fast Forward</b> ◀◀ button
FAST FORWARD WITHIN A SONG	Press and hold the <b>Next Song / Fast Forward</b> ◀◀ button
PLAY PREVIOUS SONG	Press the <b>Previous Song / Rewind</b> ►► button
REWIND WITHIN A SONG	Press and hold the <b>Previous Song / Rewind</b> ►► button
SHUFFLE PLAYBACK ORDER	While pressing and holding the <b>Next Song / Fast Forward</b> ◀◀ button, immediately press the <b>Previous Song / Rewind</b> ►► button once
RESET THUMP PRO (FOR TROUBLESHOOTING)	While pressing and holding the <b>Play / Pause</b> ►   button, immediately press the <b>Previous Song / Rewind</b> ►► button once
EQUALIZER SETTING	Press the <b>Increase Volume</b> ◀► button and the <b>Decrease Volume</b> ► button at the same time

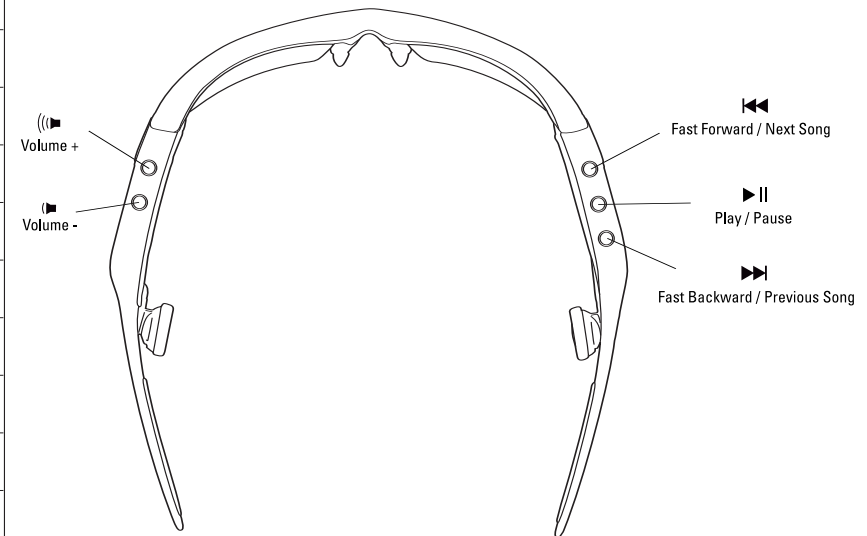

## ADVANCED CONTROLS

SKIP FORWARD TO NEXT PLAYLIST (FOLDER).	While in Pause mode...Press the <b>Increase Volume</b> ◀► button to move 1 folder forward ...then resume Play.
SKIP BACK TO PREVIOUS PLAYLIST (FOLDER).	While in Pause mode...Press the <b>Decrease Volume</b> ► button to move 1 folder back ...then resume Play.
SKIP FORWARD BY 10 SONGS	While in Pause mode...Press the <b>Next Song / Fast Forward</b> ◀◀ button to move 10 songs forward in the playlist...then resume Play.
SKIP BACK BY 10 SONGS	While in Pause mode...Press the <b>Previous Song / Rewind</b> ►► button to move 10 songs back in the playlist...then resume Play.
ACTIVATE OVERDRIVE SONG SELECTION	While pressing and holding the <b>Play / Pause</b> ►   button, immediately press the <b>Next Song / Fast Forward</b> ◀◀ button once.

## AUDIBLE CONTROLS

NEXT CHAPTER	Press the <b>Next Song / Fast Forward</b> ◀◀ button
PREVIOUS CHAPTER	Press the <b>Previous Song / Rewind</b> ►► button
SKIP TO NEXT SONG	While in Pause mode... Press the <b>Next Song / Fast Forward</b> ◀◀ button to bookmark current location and move to next song. ...then resume Play.
SKIP TO PREVIOUS SONG	While in Pause mode... Press the <b>Previous Song / Rewind</b> ►► button to bookmark current location and move to the previous song. ...then resume Play.

## INDICATOR LIGHT

SOLID GREEN	Fully charged.
SOLID AMBER	66% to 34% charged. (Shown during Power-up)
SOLID RED	33% to 0% charged. (Shown during Power-up)
BLINKING GREEN	99% to 67% charged. (Shown during Charging)
BLINKING AMBER	66% to 34% charged. (Shown during Charging)
BLINKING RED	33% to 0% charged (less than 20% of remaining battery).

## INDICATOR TONES

THUMP-THUMP	Power-Up and Power-Down tone
HIGH-LOW BEEP	Low-battery tone. Occurs when 20%, or less, of the battery remains.